

LM-79-08 Test Report

For

L-TECH CORPORTION (Brand Name: L-TECH CORP)

Shaogangtou District, Qiaotou Town
Dongguan City, Guangdong, China

LED Lamp

Model name(s): LRKT3574W-2790

Model differences: N/A

Test & Report By:

Review By:

Engineer: Johnson Sun

Manager: Tommy Liang

Date:Dec.11, 2015

Note: This report does not imply product certification, approval, or endorsement by NVLAP, NIST, or any agency of the Federal Government.

Laboratory: Standard-Tech Co. Ltd Testing Center
NVLAP CODE: 201011-0

Report Format Number STD/QR4909-A/2

Address: Standard-Tech Building, No.6 Guanhong Road,Guangzhou Science City, Guangzhou 510663, China

Tel: 8620-3229 0320 Fax: 8620-32290422 <http://www.standard-tech.com>

U.S. Department of Energy

Lighting Facts™ Uniform LM-79 Reporting Template
Laboratory Information:

| | |
|-------------------------|-------------------------|
| Name of Test Laboratory | Standard-Tech Co., Ltd. |
| Date of Test Report | Dec.11, 2015 |
| Test Report No. | GZE151229-P |
| Laboratory Contact Name | Tommy Liang |

Product Information:

| | | |
|-------------------------------------------------------------------------|-------------------|-----|
| Organization Name | L-TECH CORPORTION | |
| Brand Name | L-TECH CORP | |
| Model Number | LRKT3574W-2790 | |
| SKU (if available) | N/A | |
| Type of Luminaire (for integral lamps, list base type and lamp type) | LED Lamp | |
| Luminaire Aperture (for downlights) | -- | in. |
| Luminaire Length | -- | mm |
| Luminaires Width | -- | mm |
| Number of Units (modular products) | N/A | s |

| Electrical Measurements: | Integrating Sphere | Goniophotometer | |
|--------------------------|--------------------|-----------------|---|
| | Output | Output | |
| Input Wattage | -- | 9.462 | W |
| Input Current | -- | 0.0807 | A |
| Input Voltage (ac) | -- | 120.0 | V |
| Power Factor | -- | 0.9771 | |
| Off-State Power | -- | 0 | W |

| Photometric Characteristics | | | |
|-----------------------------------------|--------|--------|------|
| Total Initial Lumen Output | -- | 593.04 | lm |
| Initial Lumen Efficacy | -- | 62.67 | lm/w |
| Correlated color temperature / CCT | 2703 | -- | K |
| Color rendering index / CRI | 91.6 | -- | |
| R9 Value | 52 | -- | |
| Duv | 0.0002 | -- | |
| Luminous Intensity Distribution | | | |
| Center beam candlepower (if applicable) | -- | 314 | cd |
| Beam angle (if applicable) | -- | 130.4 | ° |
| Zonal lumens in the 0°-60° zone | -- | 91.5 | % |
| Zonal lumens in the 60°-90° zone | -- | 8.5 | % |
| Zonal lumens in the 90°-120° zone | -- | 0 | % |
| Zonal lumens in the 120°-180° zone | -- | 0 | % |

Laboratory: Standard-Tech Co. Ltd Testing Center
NVLAP CODE: 201011-0

Report Format Number STD/QR4909-A/2

Address: Standard-Tech Building, No.6 Guanhong Road, Guangzhou Science City, Guangzhou 510663, China

Tel: 8620-3229 0320 Fax: 8620-32290422 <http://www.standard-tech.com>

| | |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Test Specifications: | |
| Date of Receipt | : Dec.08,2015 |
| Date of Test | : Dec.10,2015 |
| Test item | : Total Luminous Flux, Luminous Distribution Intensity, Luminous Efficacy, Correlated Color Temperature, Color Rendering Index, Chromaticity Coordinate, Electrical parameters |
| Reference Standard | IES LM-79-2008 Electrical and Photometric Measurements of Solid-State Lighting Products ANSI C78.377-2008 Specifications for the Chromaticity of Solid State Lighting Products CIE 13.3-1995 Method of Measuring and Specifying Colour Rendering Properties of Light Sources CIE 15-2004 Technical Report Colorimetry IESNA LM-16-93 Practical Guide to Colorimetry of Light Source IESNA TM-16-05 Technical Memorandum on Light Emitting Diode (LED) Sources and Systems |
| Reference Work Instruction | QD25 |

Test Methods

1. Photometric and Electrical measurements – Light Distribution Method:

Photometric parameters were measured using the goniophotometer and software. The ambient temperature shall be maintained at $25\text{ }^{\circ}\text{C} \pm 1\text{ }^{\circ}\text{C}$, measured at a point not more than 1 m from the sample and at the same height as the sample. The sample was operated at 120 Volts AC, 60Hz. It was stabilized before measurement was made. Luminous flux, luminaire efficacy, zonal lumen were calculated from the software taken at 1 ° vertical intervals and 22.5 ° horizontal intervals.


2. Photometric and Electrical Measurements – Integrating Sphere Method:

Photometric parameters were measured using an integrating sphere, a spectroradiometer and software. The ambient temperature condition inside the sphere was maintained at $25\text{ }^{\circ}\text{C} \pm 1\text{ }^{\circ}\text{C}$. The sample measurements were made using a spectroradiometer connected by a fiber optic cable and detector through the detector port of the integrating sphere. The sample was operated at 120 Volts AC, 60Hz. It was stabilized before measurement was made. Chromaticity coordinates, correlated color temperature and color rendering index were calculated from the spectral radiant flux measurements taken at least 5 nm intervals over the range of 380 to 780 nm.

1. Product Information:

| | |
|---------------------------|-------------------------------|
| Brand Name | L-TECH CORP |
| Model Number | LRKT3574W-2790 |
| Luminaire Type | LED Lamp |
| Rated Voltage / Frequency | 120/277Vac, 60Hz |
| Nominal Power | 10W |
| Rated Initial Lamp Lumen | N/A |
| Declared CCT | 2700K |
| LED Manufacturer | EVERLIGHT ELECTRONICS CO.,LTD |
| LED Model | 62-217D |
| Sample Receipt Date | Dec.08,2015 |
| Sample Number | GZE151229-P1 |

Photo

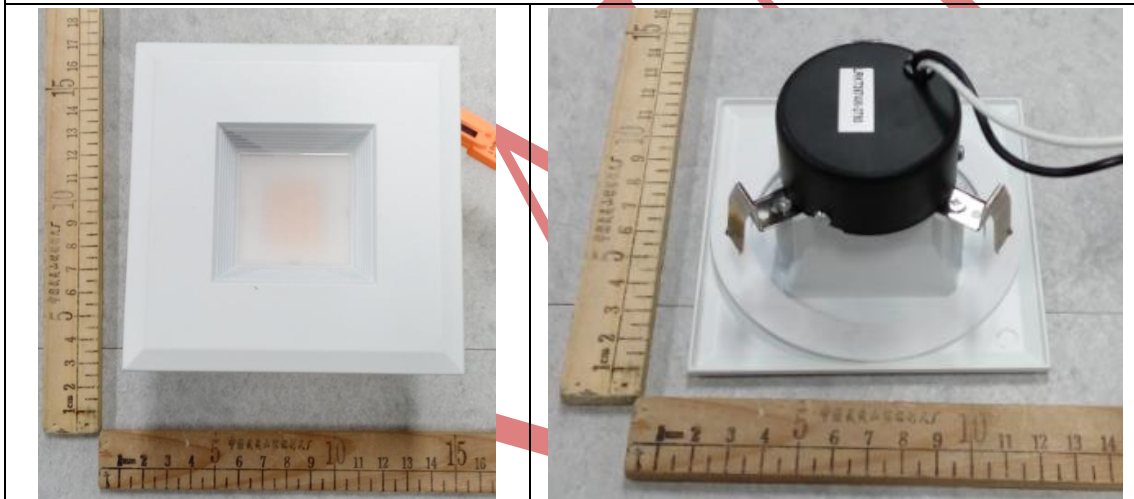

| | |
|-------------------------------------------------------------------------------------------------------------|-----------------------|
| 2.1 Electrical, Photometric and Chromaticity Measurements <i>(Refer to Work Instruction QD25)</i> | IES LM-79 2008 |
|-------------------------------------------------------------------------------------------------------------|-----------------------|

| | | | |
|-------------------------|----------------|---------------------------------|---------|
| Test date | 2015-12-10 | Test Ambient: | 25.1 °C |
| Test Orientation | As intended | Stabilization Time (min) | 90 |
| Model Number | LRKT3574W-2790 | | |

Electrical Measurement:

| Sample No. | Voltage (Vac) | Frequency (Hz) | Current (A) | Power (W) | Power Factor |
|------------------|---------------|----------------|-------------|-----------|--------------|
| GZE151229 -P1 | 120.0 | 60 | 0.0807 | 9.462 | 0.9771 |


Sphere-Spectroradiometer Method:

| Parameter | Result | Special Color Rendering Indices | | | |
|-----------------------------|---------------------|---------------------------------|----|-----|-----|
| Test Voltage (V) | 120.0 | R1 | 91 | R9 | 52 |
| Frequency (Hz) | 60 | R2 | 97 | R10 | 92 |
| Color Rendering Index (CRI) | 91.6 | R3 | 98 | R11 | 92 |
| R9 | 52 | R4 | 91 | R12 | 86 |
| CCT (K) | 2703 | R5 | 92 | R13 | 93 |
| Chromaticity (x, y) | x=0.4601 y=0.4113 | R6 | 97 | R14 | 100 |
| Chromaticity (u', v') | u'=0.2623 v'=0.5277 | R7 | 90 | R15 | 86 |
| Duv | 0.0002 | R8 | 77 | -- | -- |

Goniophotometer Method:

| Parameter | Result |
|-------------------------------|--------|
| Test Voltage (V) | 120.0 |
| Frequency (Hz) | 60 |
| Total Luminous (lm) | 593.04 |
| Luminous Efficacy (lm/W) | 62.67 |
| Beam Angle ° | 130.4 |
| Center Beam Candle Power (cd) | 314 |

Spectral Power Distribution & Chromaticity Diagram

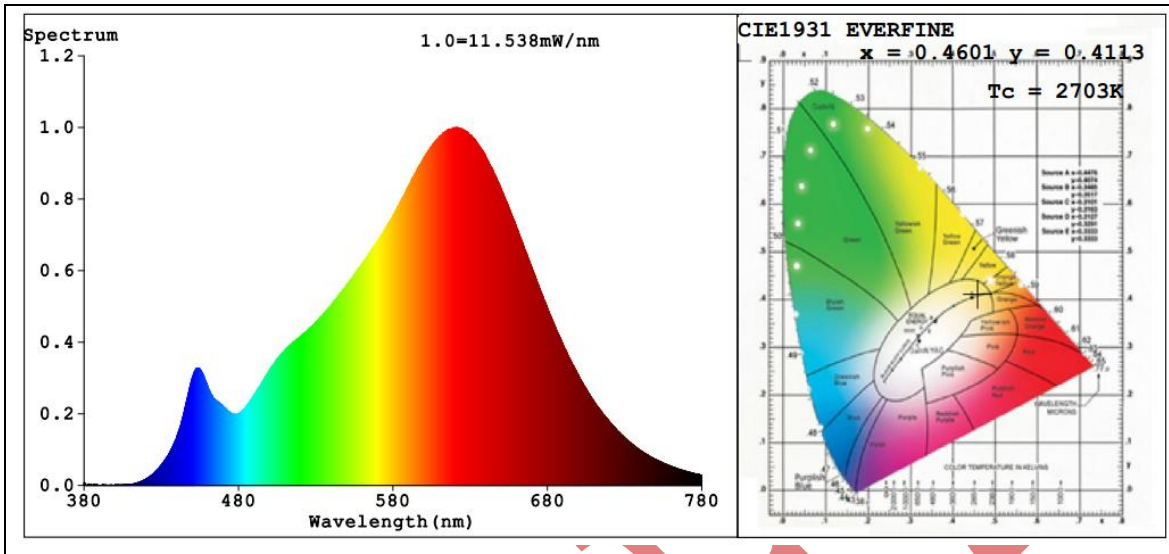

DRAFT

Laboratory: Standard-Tech Co. Ltd Testing Center
NVLAP CODE: 201011-0

Report Format Number STD/QR4909-A/2

Address: Standard-Tech Building, No.6 Guanhong Road,Guangzhou Science City, Guangzhou 510663, China

Tel: 8620-3229 0320 Fax: 8620-32290422 <http://www.standard-tech.com>

Zonal Lumen Tabulation:

| Zonal Lumen Summary | | |
|---------------------|--------|-------------|
| Zone | Lumens | % Luminaire |
| 0-30 | 233.7 | 39.4% |
| 0-40 | 364.3 | 61.4% |
| 0-60 | 542.5 | 91.5% |
| 60-90 | 50.4 | 8.5% |
| 70-100 | 16.3 | 2.8% |
| 90-120 | 0.0 | 0% |
| 0-90 | 592.9 | 100% |
| 90-180 | 0.0 | 0% |
| 0-180 | 593.0 | 100% |

| Lumens Per Zone | | | | | |
|-----------------|--------|---------|---------|--------|---------|
| Zone | Lumens | % Total | Zone | Lumens | % Total |
| 0-10 | 29.6 | 5.0% | 90-100 | 0.0 | 0% |
| 10-20 | 83.3 | 14.0% | 100-110 | 0.0 | 0% |
| 20-30 | 120.9 | 20.4% | 110-120 | 0.0 | 0% |
| 30-40 | 130.5 | 22.0% | 120-130 | 0.0 | 0% |
| 40-50 | 108.6 | 18.3% | 130-140 | 0.0 | 0% |
| 50-60 | 69.6 | 11.7% | 140-150 | 0.0 | 0% |
| 60-70 | 34.1 | 5.7% | 150-160 | 0.0 | 0% |
| 70-80 | 13.2 | 2.2% | 160-170 | 0.0 | 0% |
| 80-90 | 3.2 | 0.5% | 170-180 | 0.0 | 0% |


Laboratory: Standard-Tech Co. Ltd Testing Center
 NVLAP CODE: 201011-0

Report Format Number STD/QR4909-A/2


Address: Standard-Tech Building, No.6 Guanhong Road, Guangzhou Science City, Guangzhou 510663, China

Tel: 8620-3229 0320 Fax: 8620-32290422 <http://www.standard-tech.com>

Photometric Data

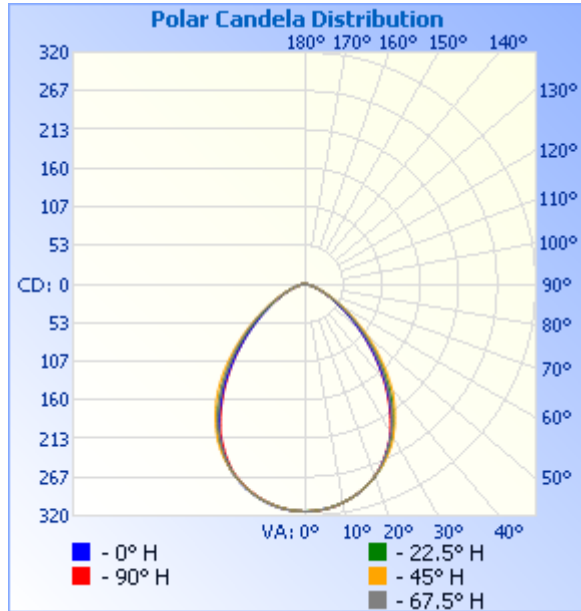

Illuminance Plots

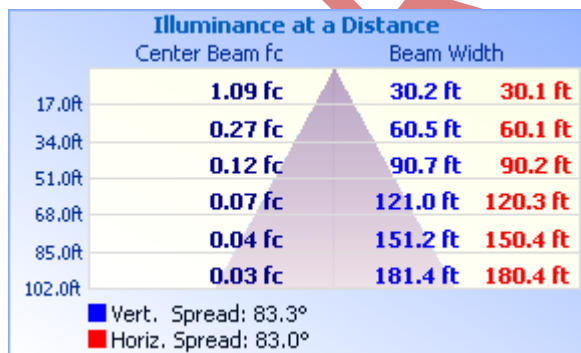


Illuminance at a Distance


| | Center Beam fc | Beam Width | |
|---------|----------------|------------|----------|
| 17.0ft | 1.09 fc | 30.2 ft | 30.1 ft |
| 34.0ft | 0.27 fc | 60.5 ft | 60.1 ft |
| 51.0ft | 0.12 fc | 90.7 ft | 90.2 ft |
| 68.0ft | 0.07 fc | 121.0 ft | 120.3 ft |
| 85.0ft | 0.04 fc | 151.2 ft | 150.4 ft |
| 102.0ft | 0.03 fc | 181.4 ft | 180.4 ft |

- Vert. Spread: 83.3°
- Horiz. Spread: 83.0°

ISOCANDELA DIAGRAM

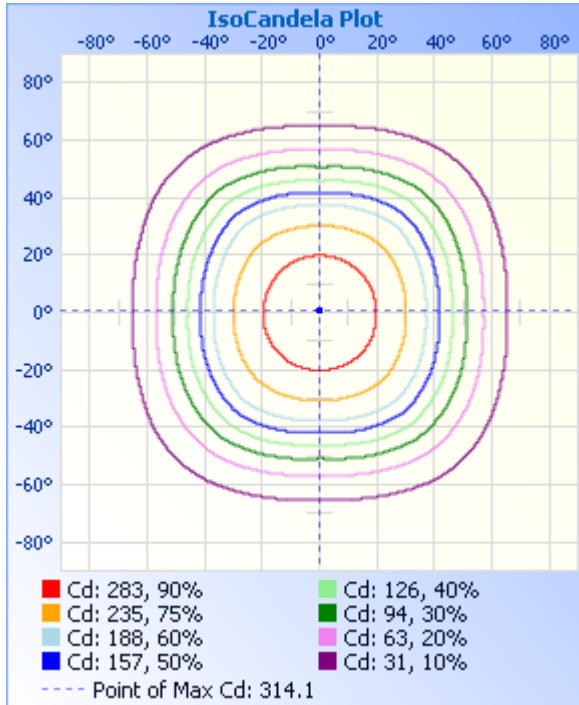

ISOLUX DIAGRAM

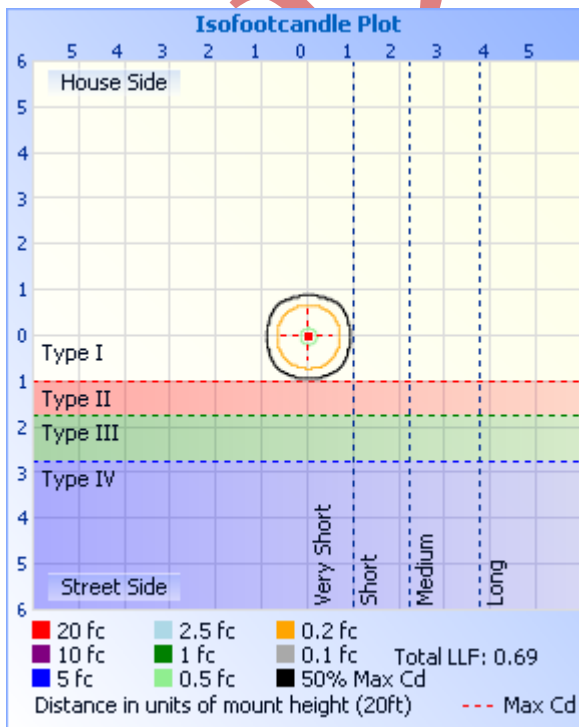

Laboratory: Standard-Tech Co. Ltd Testing Center
NVLAP CODE: 201011-0

Report Format Number STD/QR4909-A/2

Address: Standard-Tech Building, No.6 Guanhong Road, Guangzhou Science City, Guangzhou 510663, China

Tel: 8620-3229 0320 Fax: 8620-32290422 <http://www.standard-tech.com>

Candela Table - Type C

| | 0 | 22.5 | 45 | 67.5 | 90 | 112.5 | 135 | 157.5 | 180 | 202.5 | 225 | 247.5 | 270 | 292.5 | 315 | 337.5 | 360 |
|----|-----|------|-----|------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|
| 0 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 |
| 1 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 |
| 2 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 314 | 313 | 313 | 314 | 313 | 313 | 314 | 314 | 314 |
| 3 | 313 | 313 | 313 | 313 | 313 | 313 | 313 | 313 | 313 | 313 | 313 | 313 | 313 | 313 | 313 | 313 | 313 |
| 4 | 313 | 312 | 313 | 313 | 313 | 313 | 313 | 313 | 313 | 312 | 312 | 313 | 312 | 313 | 312 | 313 | 313 |
| 5 | 312 | 312 | 312 | 312 | 312 | 312 | 312 | 312 | 312 | 311 | 312 | 312 | 311 | 312 | 312 | 312 | 312 |
| 6 | 311 | 311 | 311 | 311 | 311 | 312 | 311 | 311 | 311 | 310 | 311 | 311 | 310 | 311 | 311 | 311 | 311 |
| 7 | 310 | 310 | 310 | 310 | 310 | 310 | 310 | 310 | 310 | 309 | 310 | 310 | 309 | 309 | 310 | 310 | 310 |
| 8 | 309 | 309 | 309 | 309 | 309 | 309 | 309 | 309 | 309 | 308 | 308 | 308 | 308 | 308 | 309 | 309 | 309 |
| 9 | 308 | 307 | 308 | 308 | 308 | 308 | 307 | 307 | 307 | 307 | 307 | 306 | 306 | 307 | 307 | 307 | 308 |
| 10 | 306 | 306 | 306 | 306 | 306 | 306 | 306 | 306 | 306 | 305 | 305 | 305 | 305 | 305 | 306 | 306 | 306 |
| 11 | 305 | 304 | 305 | 305 | 304 | 304 | 304 | 304 | 304 | 304 | 304 | 304 | 303 | 304 | 304 | 304 | 305 |
| 12 | 303 | 303 | 303 | 303 | 303 | 303 | 302 | 302 | 302 | 302 | 302 | 302 | 301 | 302 | 302 | 302 | 303 |
| 13 | 301 | 301 | 301 | 301 | 301 | 301 | 300 | 300 | 300 | 300 | 299 | 300 | 299 | 300 | 300 | 300 | 301 |
| 14 | 299 | 299 | 299 | 299 | 299 | 298 | 298 | 298 | 298 | 298 | 297 | 297 | 297 | 297 | 298 | 298 | 299 |
| 15 | 297 | 296 | 296 | 296 | 296 | 296 | 296 | 296 | 296 | 295 | 295 | 295 | 295 | 295 | 295 | 296 | 297 |
| 16 | 294 | 294 | 294 | 294 | 294 | 294 | 294 | 294 | 294 | 293 | 293 | 293 | 292 | 292 | 293 | 294 | 294 |
| 17 | 292 | 292 | 291 | 291 | 291 | 292 | 291 | 291 | 291 | 290 | 290 | 290 | 289 | 290 | 291 | 291 | 292 |
| 18 | 289 | 289 | 289 | 288 | 289 | 289 | 288 | 288 | 288 | 287 | 287 | 287 | 286 | 287 | 288 | 288 | 289 |
| 19 | 286 | 286 | 286 | 286 | 286 | 286 | 285 | 285 | 285 | 285 | 284 | 284 | 283 | 284 | 285 | 286 | 286 |
| 20 | 283 | 283 | 283 | 282 | 283 | 282 | 283 | 282 | 282 | 281 | 281 | 281 | 280 | 281 | 282 | 283 | 283 |
| 21 | 280 | 280 | 280 | 279 | 279 | 279 | 280 | 279 | 278 | 278 | 278 | 277 | 278 | 279 | 279 | 279 | 280 |
| 22 | 276 | 277 | 277 | 276 | 275 | 276 | 276 | 275 | 274 | 274 | 275 | 274 | 273 | 274 | 276 | 276 | 276 |
| 23 | 272 | 273 | 273 | 272 | 271 | 272 | 273 | 272 | 271 | 271 | 272 | 271 | 268 | 270 | 272 | 273 | 272 |
| 24 | 268 | 269 | 270 | 268 | 267 | 268 | 269 | 267 | 266 | 267 | 268 | 266 | 264 | 266 | 269 | 268 | 268 |
| 25 | 263 | 264 | 266 | 263 | 263 | 264 | 265 | 263 | 262 | 262 | 264 | 262 | 259 | 262 | 265 | 264 | 263 |
| 26 | 259 | 260 | 262 | 259 | 258 | 259 | 261 | 259 | 257 | 258 | 260 | 257 | 254 | 257 | 261 | 259 | 259 |
| 27 | 254 | 255 | 258 | 254 | 253 | 255 | 257 | 254 | 253 | 253 | 256 | 253 | 249 | 252 | 257 | 255 | 254 |
| 28 | 249 | 251 | 254 | 249 | 248 | 250 | 253 | 249 | 248 | 249 | 252 | 248 | 244 | 247 | 253 | 250 | 249 |

Laboratory: Standard-Tech Co. Ltd Testing Center
 NVLAP CODE: 201011-0

Report Format Number STD/QR4909-A/2

Address: Standard-Tech Building, No.6 Guanhong Road, Guangzhou Science City, Guangzhou 510663, China

Tel: 8620-3229 0320 Fax: 8620-32290422 <http://www.standard-tech.com>

| | | | | | | | | | | | | | | | | | |
|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 29 | 244 | 246 | 250 | 244 | 243 | 245 | 248 | 245 | 242 | 244 | 247 | 242 | 239 | 242 | 249 | 245 | 244 |
| 30 | 239 | 241 | 245 | 239 | 237 | 240 | 243 | 240 | 236 | 239 | 242 | 237 | 233 | 237 | 243 | 240 | 239 |
| 31 | 233 | 236 | 239 | 234 | 231 | 235 | 239 | 234 | 230 | 233 | 237 | 232 | 227 | 232 | 238 | 236 | 233 |
| 32 | 227 | 231 | 234 | 228 | 224 | 229 | 234 | 228 | 224 | 228 | 232 | 227 | 220 | 226 | 233 | 230 | 227 |
| 33 | 221 | 225 | 228 | 222 | 218 | 223 | 228 | 222 | 217 | 222 | 226 | 220 | 214 | 220 | 227 | 224 | 221 |
| 34 | 214 | 219 | 223 | 216 | 211 | 216 | 222 | 216 | 210 | 215 | 220 | 214 | 207 | 214 | 221 | 218 | 214 |
| 35 | 207 | 213 | 217 | 209 | 204 | 210 | 216 | 210 | 203 | 209 | 214 | 207 | 200 | 207 | 215 | 212 | 207 |
| 36 | 200 | 206 | 211 | 202 | 197 | 203 | 211 | 203 | 196 | 202 | 209 | 201 | 193 | 201 | 210 | 206 | 200 |
| 37 | 193 | 200 | 206 | 196 | 190 | 197 | 205 | 196 | 189 | 195 | 203 | 194 | 186 | 194 | 204 | 199 | 193 |
| 38 | 186 | 193 | 200 | 189 | 183 | 190 | 199 | 189 | 182 | 188 | 197 | 188 | 179 | 187 | 198 | 192 | 186 |
| 39 | 179 | 186 | 194 | 182 | 176 | 183 | 192 | 182 | 175 | 182 | 190 | 181 | 172 | 180 | 192 | 185 | 179 |
| 40 | 171 | 179 | 187 | 175 | 169 | 176 | 186 | 175 | 167 | 175 | 183 | 174 | 165 | 174 | 185 | 178 | 171 |
| 41 | 164 | 172 | 180 | 168 | 162 | 170 | 179 | 168 | 160 | 167 | 177 | 167 | 158 | 167 | 178 | 171 | 164 |
| 42 | 156 | 165 | 173 | 162 | 155 | 163 | 171 | 161 | 152 | 160 | 169 | 160 | 151 | 160 | 171 | 164 | 156 |
| 43 | 149 | 158 | 166 | 155 | 148 | 156 | 164 | 154 | 145 | 153 | 162 | 154 | 144 | 153 | 164 | 157 | 149 |
| 44 | 142 | 151 | 158 | 148 | 141 | 149 | 157 | 147 | 138 | 146 | 155 | 147 | 137 | 146 | 157 | 150 | 142 |
| 45 | 135 | 144 | 151 | 141 | 135 | 142 | 149 | 140 | 131 | 139 | 148 | 140 | 130 | 140 | 150 | 143 | 135 |
| 46 | 128 | 137 | 144 | 135 | 128 | 135 | 142 | 133 | 123 | 132 | 140 | 134 | 124 | 133 | 143 | 136 | 128 |
| 47 | 121 | 130 | 137 | 128 | 121 | 129 | 135 | 126 | 117 | 125 | 133 | 127 | 117 | 126 | 135 | 129 | 121 |
| 48 | 114 | 123 | 130 | 121 | 115 | 122 | 128 | 119 | 110 | 118 | 126 | 120 | 111 | 120 | 128 | 122 | 114 |
| 49 | 107 | 116 | 123 | 115 | 108 | 116 | 121 | 112 | 103 | 111 | 120 | 114 | 105 | 113 | 121 | 115 | 107 |
| 50 | 101 | 109 | 116 | 108 | 102 | 109 | 114 | 106 | 97 | 105 | 113 | 108 | 99 | 107 | 115 | 108 | 101 |
| 51 | 95 | 103 | 110 | 102 | 96 | 103 | 107 | 99 | 91 | 98 | 106 | 101 | 93 | 101 | 108 | 102 | 95 |
| 52 | 89 | 96 | 103 | 96 | 90 | 97 | 101 | 93 | 85 | 92 | 99 | 95 | 87 | 95 | 101 | 96 | 89 |
| 53 | 83 | 90 | 96 | 90 | 85 | 91 | 94 | 87 | 79 | 86 | 93 | 89 | 82 | 89 | 95 | 89 | 83 |
| 54 | 78 | 85 | 90 | 85 | 79 | 85 | 88 | 81 | 74 | 80 | 87 | 84 | 76 | 83 | 89 | 84 | 78 |
| 55 | 72 | 79 | 84 | 79 | 74 | 79 | 82 | 75 | 69 | 75 | 81 | 78 | 71 | 78 | 83 | 78 | 72 |
| 56 | 67 | 73 | 79 | 74 | 69 | 74 | 76 | 70 | 64 | 69 | 75 | 73 | 66 | 73 | 77 | 73 | 67 |
| 57 | 62 | 68 | 73 | 69 | 64 | 69 | 70 | 65 | 59 | 64 | 69 | 67 | 61 | 68 | 72 | 67 | 62 |
| 58 | 58 | 63 | 67 | 64 | 59 | 64 | 65 | 60 | 55 | 59 | 64 | 62 | 57 | 62 | 66 | 62 | 58 |
| 59 | 53 | 58 | 62 | 59 | 55 | 59 | 60 | 55 | 51 | 54 | 59 | 57 | 52 | 58 | 61 | 57 | 53 |

Laboratory: Standard-Tech Co. Ltd Testing Center
 NVLAP CODE: 201011-0

Report Format Number STD/QR4909-A/2

Address: Standard-Tech Building, No.6 Guanhong Road,Guangzhou Science City, Guangzhou 510663, China

Tel: 8620-3229 0320 Fax: 8620-32290422 <http://www.standard-tech.com>

| | | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 60 | 49 | 53 | 57 | 54 | 51 | 54 | 55 | 51 | 47 | 50 | 54 | 53 | 48 | 53 | 56 | 53 | 49 |
| 61 | 45 | 49 | 52 | 50 | 47 | 50 | 50 | 46 | 43 | 46 | 50 | 48 | 45 | 49 | 51 | 48 | 45 |
| 62 | 42 | 45 | 48 | 46 | 43 | 46 | 46 | 43 | 40 | 42 | 45 | 44 | 41 | 45 | 47 | 44 | 42 |
| 63 | 39 | 41 | 44 | 42 | 39 | 42 | 42 | 39 | 37 | 39 | 41 | 40 | 38 | 41 | 43 | 41 | 39 |
| 64 | 35 | 37 | 40 | 38 | 36 | 38 | 38 | 36 | 34 | 35 | 37 | 37 | 34 | 37 | 39 | 37 | 35 |
| 65 | 33 | 34 | 36 | 35 | 33 | 34 | 35 | 33 | 31 | 32 | 34 | 33 | 31 | 34 | 35 | 34 | 33 |
| 66 | 30 | 31 | 32 | 31 | 30 | 31 | 31 | 30 | 29 | 29 | 31 | 30 | 29 | 31 | 32 | 31 | 30 |
| 67 | 27 | 28 | 29 | 28 | 27 | 28 | 28 | 27 | 26 | 27 | 28 | 28 | 26 | 28 | 29 | 28 | 27 |
| 68 | 25 | 26 | 26 | 26 | 25 | 26 | 25 | 25 | 24 | 24 | 25 | 25 | 24 | 25 | 26 | 26 | 25 |
| 69 | 22 | 23 | 24 | 23 | 22 | 23 | 23 | 22 | 21 | 22 | 22 | 23 | 21 | 23 | 23 | 23 | 22 |
| 70 | 20 | 21 | 21 | 21 | 20 | 21 | 21 | 20 | 19 | 20 | 20 | 20 | 19 | 20 | 21 | 21 | 20 |
| 71 | 18 | 19 | 19 | 19 | 18 | 19 | 19 | 18 | 17 | 18 | 18 | 18 | 16 | 18 | 19 | 19 | 18 |
| 72 | 16 | 17 | 17 | 17 | 15 | 17 | 17 | 16 | 15 | 16 | 16 | 16 | 15 | 16 | 17 | 17 | 16 |
| 73 | 14 | 15 | 15 | 15 | 14 | 15 | 15 | 14 | 14 | 14 | 15 | 14 | 13 | 14 | 15 | 15 | 14 |
| 74 | 13 | 13 | 14 | 13 | 13 | 13 | 14 | 13 | 12 | 13 | 13 | 13 | 12 | 13 | 14 | 13 | 13 |
| 75 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 11 | 12 | 12 | 12 | 12 |
| 76 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 |
| 77 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 9 | 10 | 9 | 10 | 10 | 10 | 10 |
| 78 | 9 | 9 | 9 | 9 | 9 | 9 | 9 | 9 | 9 | 9 | 8 | 9 | 8 | 9 | 9 | 9 | 9 |
| 79 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 |
| 80 | 7 | 7 | 7 | 7 | 7 | 7 | 7 | 7 | 7 | 7 | 7 | 7 | 7 | 7 | 7 | 7 | 7 |
| 81 | 6 | 6 | 6 | 6 | 6 | 6 | 6 | 6 | 6 | 6 | 6 | 6 | 6 | 6 | 6 | 6 | 6 |
| 82 | 5 | 6 | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 |
| 83 | 5 | 5 | 4 | 5 | 5 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 5 | 5 |
| 84 | 4 | 3 | 3 | 4 | 4 | 4 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 4 | 4 | 4 |
| 85 | 3 | 2 | 2 | 3 | 3 | 3 | 2 | 3 | 3 | 3 | 2 | 3 | 3 | 3 | 3 | 3 | 3 |
| 86 | 2 | 1 | 1 | 2 | 2 | 2 | 1 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 |
| 87 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| 88 | 1 | 1 | 0 | 1 | 1 | 1 | 1 | 1 | 0 | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| 89 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 90 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

Laboratory: Standard-Tech Co. Ltd Testing Center
 NVLAP CODE: 201011-0

Report Format Number STD/QR4909-A/2

Address: Standard-Tech Building, No.6 Guanhong Road,Guangzhou Science City, Guangzhou 510663, China

Tel: 8620-3229 0320 Fax: 8620-32290422 <http://www.standard-tech.com>

| | | | | | | | | | | | | | | | | |
|-----|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 91 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 92 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 93 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 94 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 95 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 96 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 97 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 98 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 99 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 100 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 101 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 102 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 103 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 104 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 105 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 106 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 107 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 108 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 109 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 110 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 111 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 112 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 113 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 114 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 115 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 116 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 117 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 118 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 119 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 120 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 121 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

Laboratory: Standard-Tech Co. Ltd Testing Center
 NVLAP CODE: 201011-0

Report Format Number STD/QR4909-A/2

Address: Standard-Tech Building, No.6 Guanhong Road,Guangzhou Science City, Guangzhou 510663, China

Tel: 8620-3229 0320 Fax: 8620-32290422 <http://www.standard-tech.com>

| | | | | | | | | | | | | | | | | |
|-----|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 122 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 123 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 124 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 125 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 126 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 127 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 128 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 129 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 130 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 131 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 132 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 133 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 134 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 135 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 136 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 137 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 138 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 139 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 140 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 141 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 142 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 143 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 144 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 145 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 146 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 147 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 148 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 149 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 150 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 151 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 152 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

Laboratory: Standard-Tech Co. Ltd Testing Center
 NVLAP CODE: 201011-0

Report Format Number STD/QR4909-A/2

Address: Standard-Tech Building, No.6 Guanhong Road,Guangzhou Science City, Guangzhou 510663, China

Tel: 8620-3229 0320 Fax: 8620-32290422 <http://www.standard-tech.com>

| | | | | | | | | | | | | | | | | |
|-----|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 153 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 154 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 155 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 156 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 157 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 158 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 159 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 160 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 161 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 162 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 163 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 164 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 165 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 166 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 167 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 168 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 169 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 170 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 171 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 172 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 173 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 174 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 175 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 176 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 177 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 178 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 179 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 180 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

Laboratory: Standard-Tech Co. Ltd Testing Center
 NVLAP CODE: 201011-0

Report Format Number STD/QR4909-A/2

Address: Standard-Tech Building, No.6 Guanhong Road,Guangzhou Science City, Guangzhou 510663, China

Tel: 8620-3229 0320 Fax: 8620-32290422 <http://www.standard-tech.com>

DRAFT

Laboratory: Standard-Tech Co. Ltd Testing Center
NVLAP CODE: 201011-0

Report Format Number STD/QR4909-A/2

Address: Standard-Tech Building, No.6 Guanhong Road,Guangzhou Science City, Guangzhou 510663, China

Tel: 8620-3229 0320 Fax: 8620-32290422 <http://www.standard-tech.com>

3. Test Equipment

| Equipment ID | Equipment Name | Last Calibration Date | Next Calibration Date |
|---------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|-----------------------|-----------------------|
| ST-R-336 | 2 meter Integrating Sphere | 2015-07-01 | 2016-06-30 |
| ST-R-331 | Spectral analysis system HAAS-2000 | 2015-07-01 | 2016-06-30 |
| D204 | Standard Lamp | 2015-07-01 | 2016-06-30 |
| PF2010 | Power Meter for Integrating Sphere | 2015-07-01 | 2016-06-30 |
| EE-09 | Goniophotometer system | 2015-07-01 | 2016-06-30 |
| D908S | Standard Lamp | 2015-07-01 | 2016-06-30 |
| PF210 | Power Meter for Goniophotometer | 2015-07-01 | 2016-06-30 |
| ST-R-181A | Temperature Tester | 2015-07-01 | 2016-06-30 |
| Uncertainty Photometric Measurement (Sphere):1.74% Chromaticity Measurement(Sphere):14.3K Photometric Measurement(Goniophotometer):1.62% | | | |

***** END OF DATASHEET PACKAGE *****